


S63 M157 Cold Air Intake System

SKU: BBCAIS004

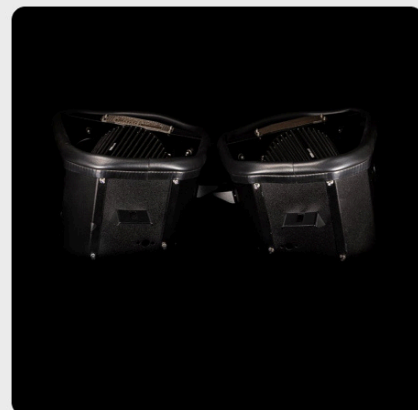

Thank you for purchasing the Mercedes AMG S63(S) M157 Cold Air Intake

This Installation guide provides instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Airbox	-	1
2. Intake Pipe - RH	-	1
3. Intake Pipe - LH	-	1
4. Standard Twin Flow BB Filter	-	2
5. Filter Clamp - 76×127mm	-	2
6. Standard Logo Plate	-	2
7. EEX001 (Extension Cable) Yellow	-	2

Compatibility

S63(S) AMG (W222/A217/C217) - M157 5.5L V8 BiTurbo - (2014 - 2017)

S500 (W222/A217/C217) - M278 4.7L V8 BiTurbo - (2014 - 2017)

S550 (W222/A217/C217) - M278 4.7L V8 BiTurbo - (2014 - 2017)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex 7mm, 8mm, 10mm nut drivers
2. Tension Clamp Pliers

PPE





1. Gloves
2. Safety Glasses

OEM Air Box Removal



Step 1

First remove the engine cover. Unplug and disconnect the sensor cables from the OEM Air box.

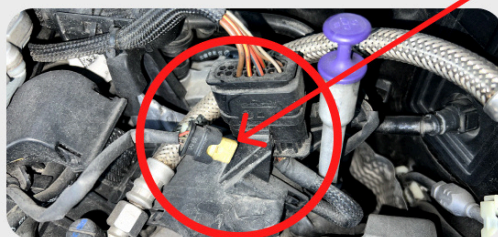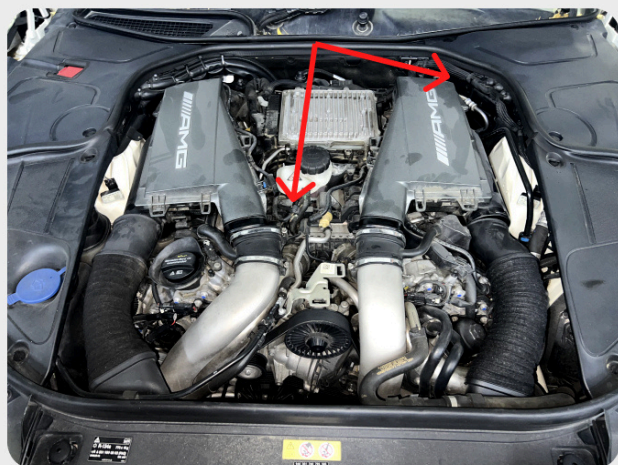

Step 2

Loosen the clamps of the coupler as shown below and detach the inlet duct from the OEM boxes. And then remove both the OEM boxes completely.

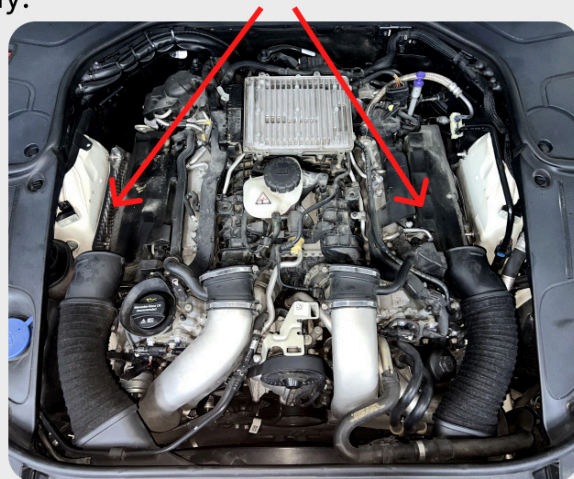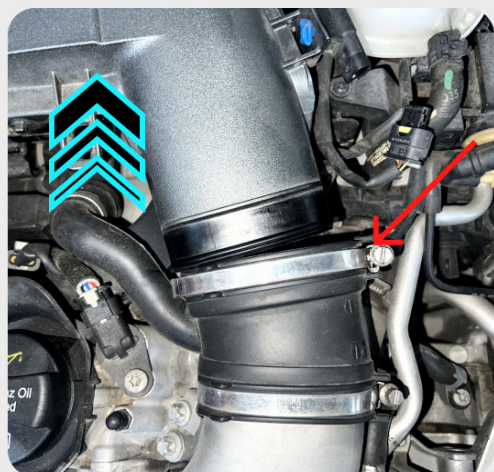

BlackBoost Cold Air Intake Installation



Blackboost Cold Air Intake Installation



Step 1

Loosen the screws and remove the Logo plate brackets, and then attached the logo plates.



Step 2

Place the Airboxes according to the correct side and connect the air inlet duct. Install the BlackBoost tubes on to the coupler as shown below.

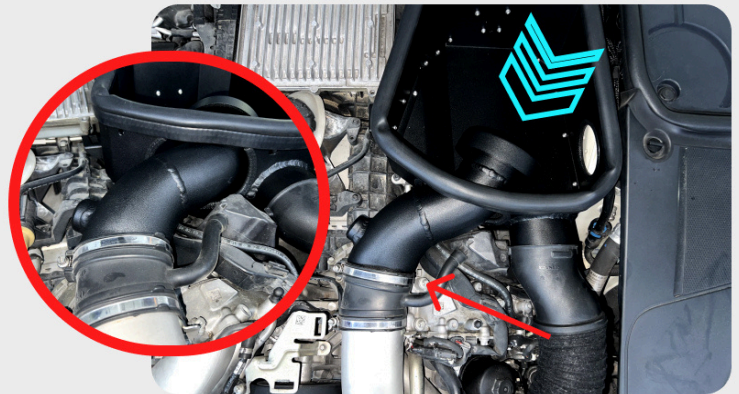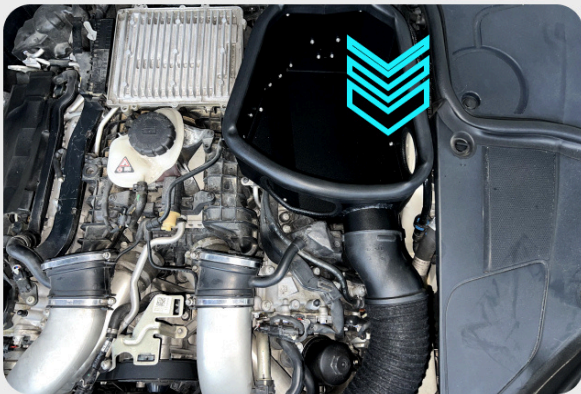

Step 3


Attach the BlackBoost filters to the pipes as shown below.



Step 4



Hand tighten the clamp of the coupler and then the Air filters.

(Only hand tighten it and take extra care to make sure you don't over tighten it)

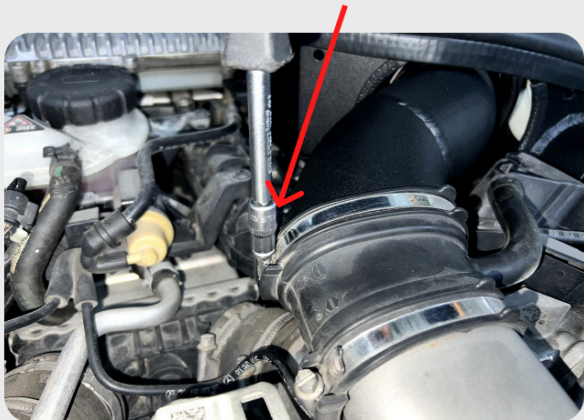



Step 5

Connect the OEM Inlet duct with the BlackBoost Air box

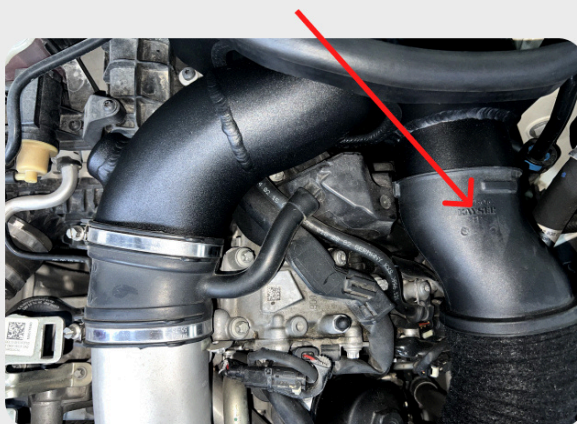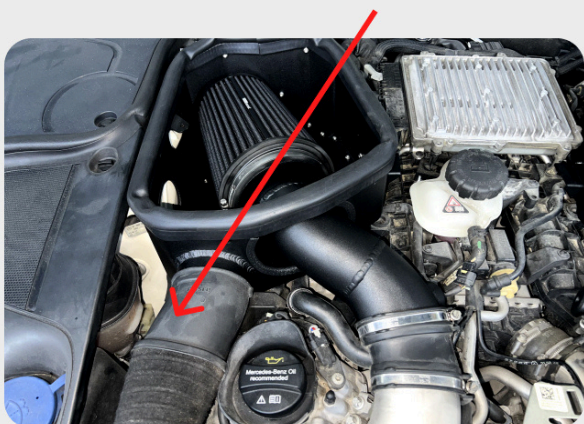


Step 6

Remove the sensor from from OEM Intake and connect it with the BlackBoost Intake pipe as shown below. Use the BlackBoost sensor extension cables and then plug the sensor cable back.

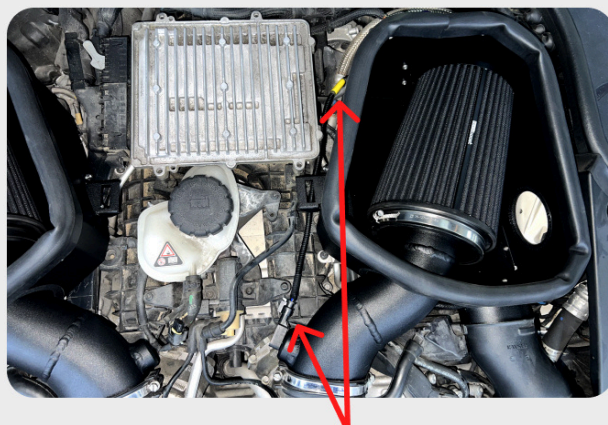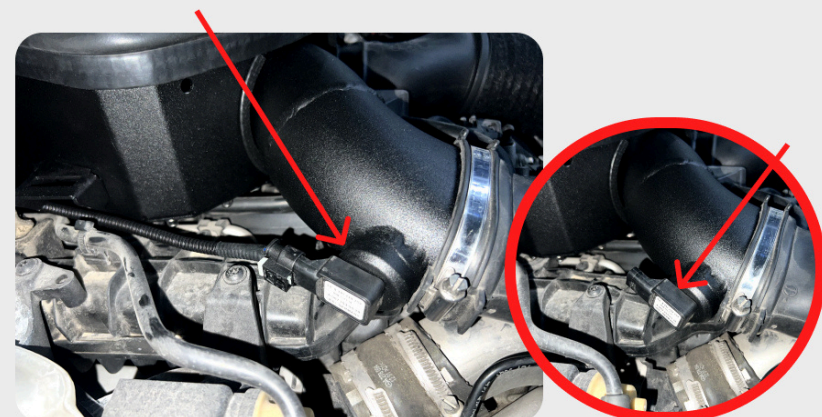

Step 7

Remove the sensor from from OEM Intake, Use the provided extension cables and connect as shown below

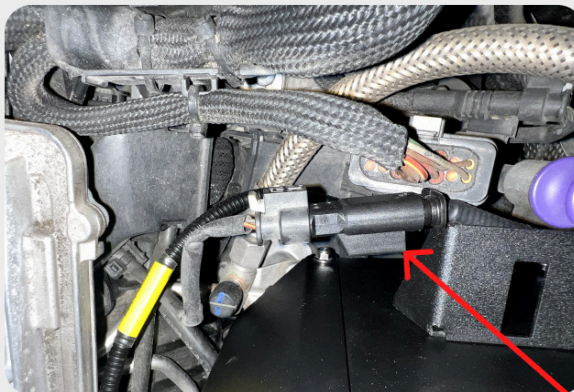

If you see the
Check EngineLight coming up.
Visit this link

<https://bit.ly/bbcheckeng>



Step 8

Fix the Logo plate brackets into the BlackBoost Air box.



Step 9

Finally close the engine cover.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.