

C63 M156 Cold Air Intake System

SKU: BBCAIS017



Thank you for purchasing the Mercedes AMG C63 M156 Cold Air Intake

This Installation guide provides instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Airbox	-	1
2. Moulded Synthetic Composite Intake Pipe	-	1
3. Manifold coupler	-	1
4. 0.5mm Spring steel clips	-	2
5. MAF sensor caps	-	2
6. Standard Twin Flow BB Filter	-	1
7. Clamps	-	2
8. Engine Cover	-	1
9. Standard Logo Plate	-	1
10. Black Spacers	-	4



Compatibility

C63 AMG (W204) - M156 6.2L V8 - (2007 - 2015)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex 7mm, 8mm nut drivers
2. Flat head screw driver

PPE





1. Gloves
2. Safety Glasses

OEM Air Box Removal



Step 1

Remove the Engine cover. Unplug the sensor cables from the MAF sensor as shown below.

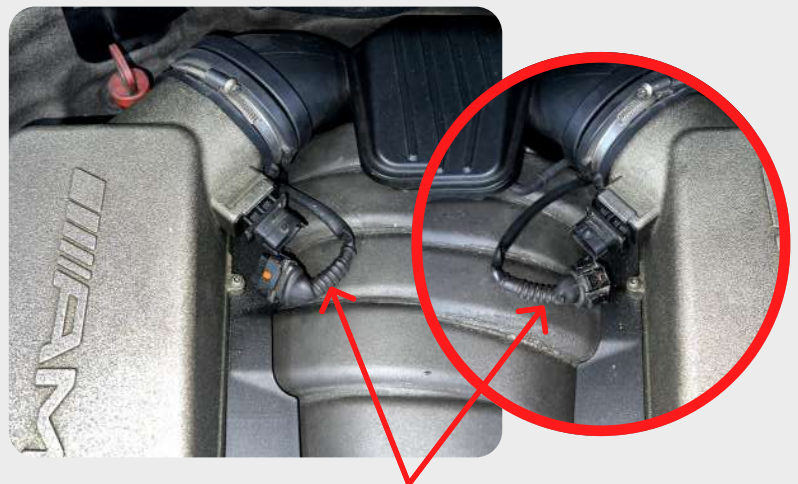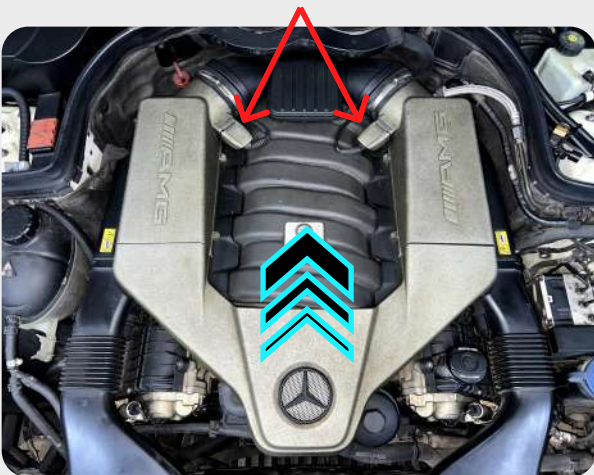


Step 2

Loosen and remove the Inlet duct as shown below.

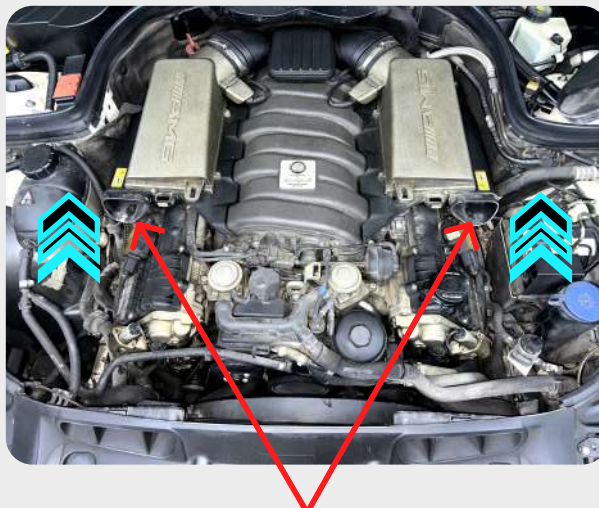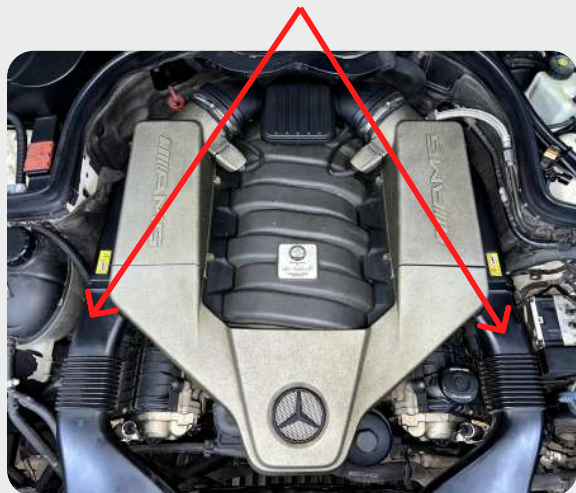


Step 3

Loosen the clamps and remove the OEM Airbox completely as shown below.

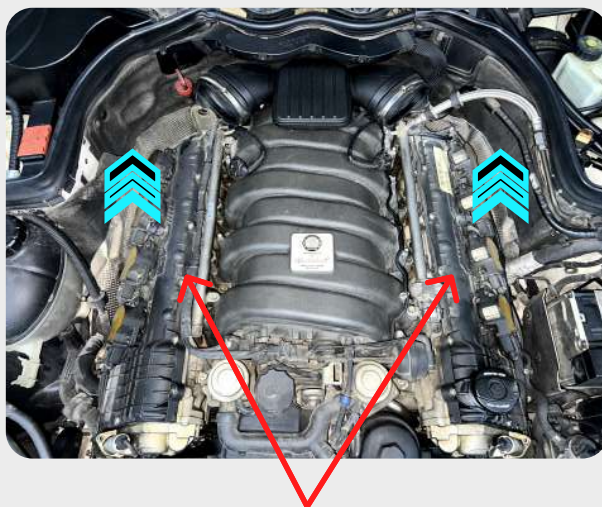

Step 4

Unplug the vacuum hose off the OEM plastic tube and then remove the tubes completely.

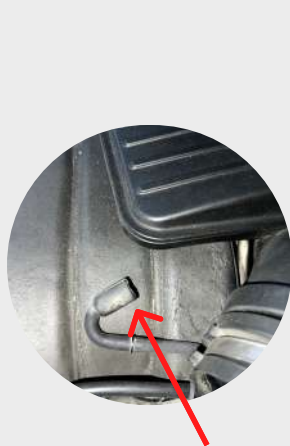


BlackBoost Cold Air Intake Installation



Blackboost Cold Air Intake Installation

Step 1

Install all 4 BlackBoost spacer as shown below.

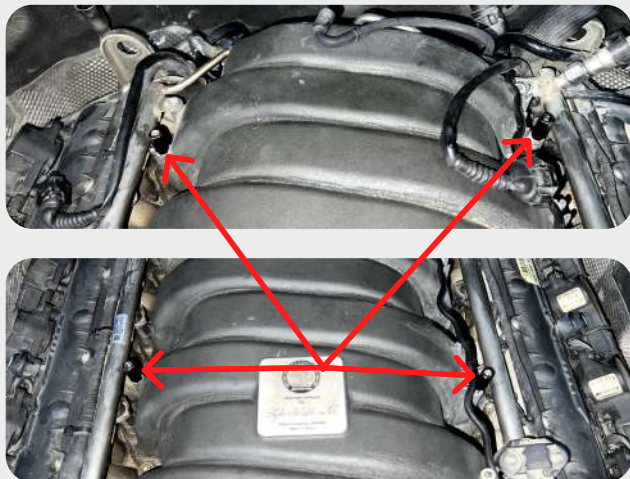


Step 2

Place the BlackBoost Airbox as shown below. Make sure the spacer are aligned




Step 3

Tighten all the screws as shown below.

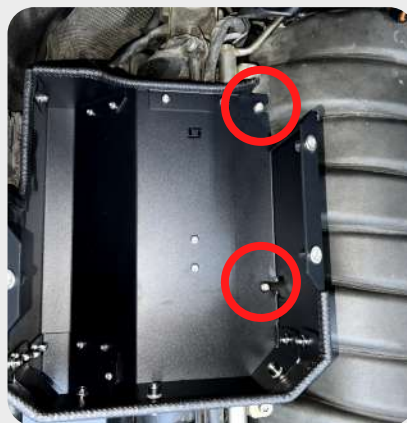

Step 4

Use a flat head screw driver to remove the clip in order to remove the MAF sensor from OEM tubes as shown below **along with the rubber gasket**.

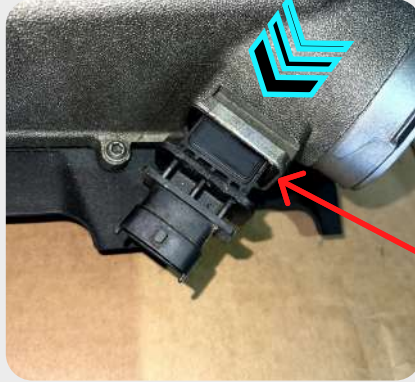

Step 5

Remove the MAF sensor brace and then install it with the MAF sensor as shown below.
(Only hand tighten it and take extra care to make sure you don't over tighten it)



Step 6

Install the BlackBoost filters into the BlackBoost plastic pipes and hand tighten the clamps and then insert the plastic pipes to the intake manifold.


(Only hand tighten it and take extra care to make sure you don't over tighten it)



Step 7

Make sure to lock the BlackBoost plastic tubes and then hand tighten the clamps.

(Only hand tighten it and take extra care to make sure you don't over tighten it)

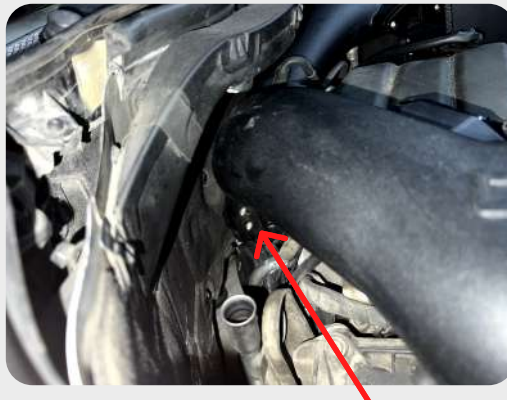

Step 8

Connect the sensor cables back into the MAF sensors




Step 9

Close the Airbox with the cover and tighten it with the screws.




Step 10

Connect both the OEM Inlet duct to the BlackBoost Airboxes.

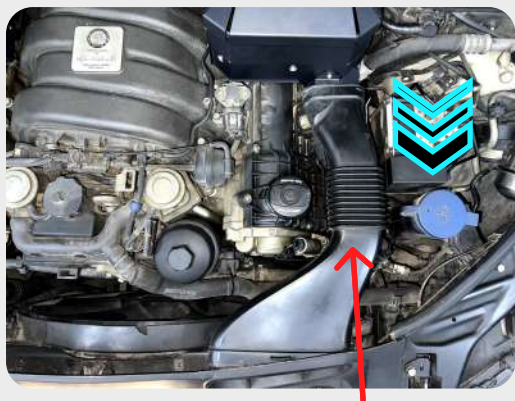

Step 11


Connect the Vacuum hose to the BlackBoost Tube as shown below.

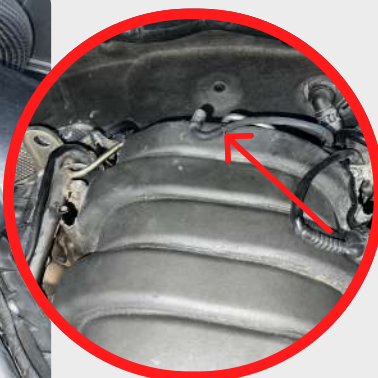

Step 12

Close the engine cover and screw the bolts as shown below .

Use the provided nuts and fix the BlackBoost logo plates to the engine cover.

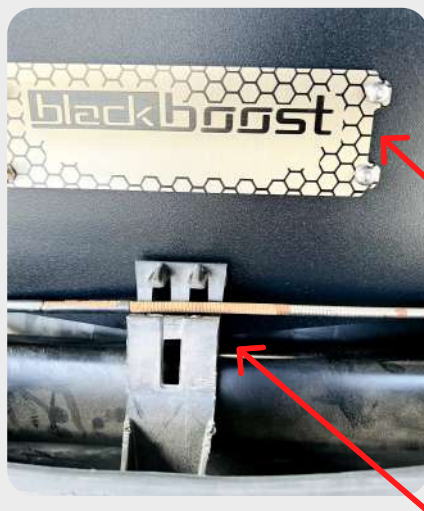



Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.*