

Chevrolet Silverado 5.3L / 6.2L V8 N/A

SKU: BBCAIS025



Thank you for purchasing the Blackboost Chevrolet Silverado Cold Air Intake.

This Installation guide provides the instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Powder-coated Airbox	-	1
2. Moulded Synthetic Composite Intake Tube	-	
3. Oversized Coupler with 1/8th NPT Methanol Port	-	
4. 8 -Inch High-Flow Synthetic Dry Air Filter with clamp	-	
5. CCV Hose with Coupler Adapter	-	
6. BlackBoost Logo Plates	-	
	-	
	-	

Compatibility

Silverado 1500 - 5.3L V8 L83 N/A - (2019 - 2025)
Silverado 1500 - 6.2L V8 L86 N/A - (2019 - 2025)
Sierra 1500 - 5.3L V8 L83 N/A - (2019 - 2025)
Sierra 1500 - 6.2L V8 L86 N/A - (2019 - 2025)
Tahoe - 5.3L V8 L83 N/A - (2019 - 2025)
Tahoe - 6.2L V8 L86 N/A - (2019 - 2025)
Suburban - 5.3L V8 L83 N/A - (2019 - 2025)
Suburban - 6.2L V8 L86 N/A - (2019 - 2025)
Yukon - 5.3L V8 L83 N/A - (2019 - 2025)
Yukon XL - 5.3L V8 L83 N/A - (2019 - 2025)
Yukon XL - 6.2L V8 L86 N/A - (2019 - 2025)
Yukon - 6.2L V8 L86 N/A - (2019 - 2025)
Escalade - 6.2L V8 L86 N/A - (2019 - 2025)
Escalade ESV - 6.2L V8 L86 N/A - (2019 - 2025)

Caution: Make sure the engine bay is cooled down.



Tools Required



1. Hex nut driver
2. 13mm, 18mm Spanners
3. Clip Remover

PPE



1. Gloves
2. Safety Glasses

OEM Intake Box Removal

Step 1

Unscrew the below shown screws to remove the hood latch lever.



Step 2

Remove all the push clips off the below shown plastic air diverter.



Step 3

Remove the plastic air diverter as shown below and keep it for later use.




Step 4

Remove the below shown push clip and pull the duct till it gets separated from the OEM Airbox. Keep the clip aside for later use.




Step 5

Detach the below shown large wire harness off the OEM Airbox by releasing the lock.

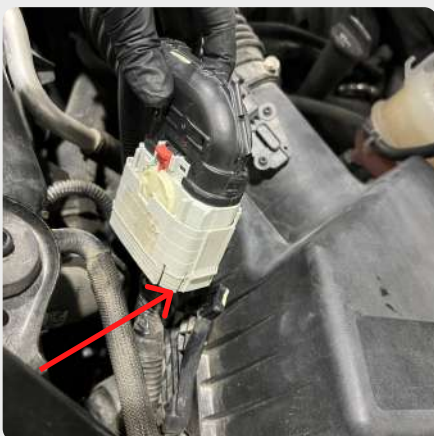


Step 6

Unplug the MAF sensor cables by pulling the red tab to unlock.
Unscrew and remove the the sensor as shown below for later use.

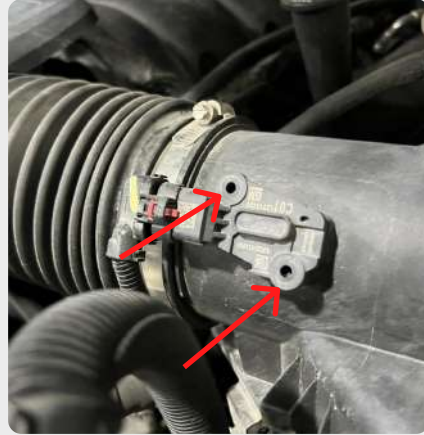



Step 7

Loosen the below shown clamp, unscrew the nut and lift the OEM Airbox high to remove it.
Keep the removed nut for later use. Pay attention to the duct and adjust it accordingly.

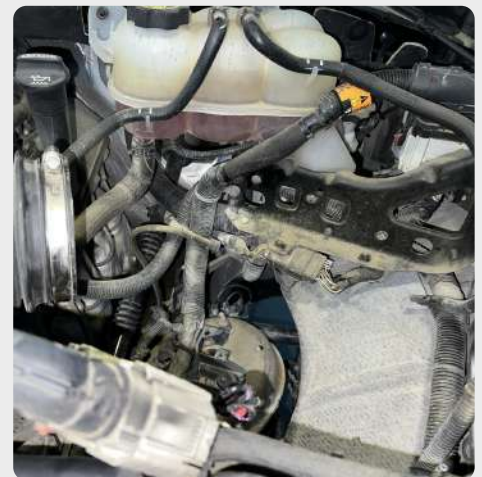


Step 8

Unplug and remove the crankcase vent tube completely by pressing the grey coloured lock at both ends.

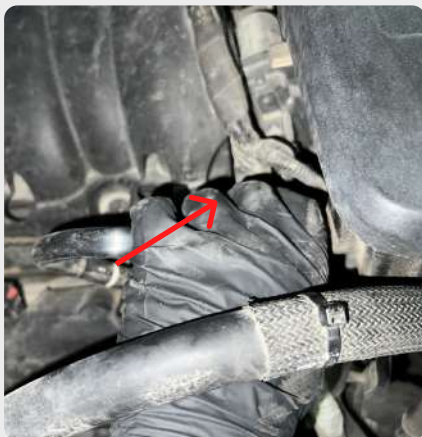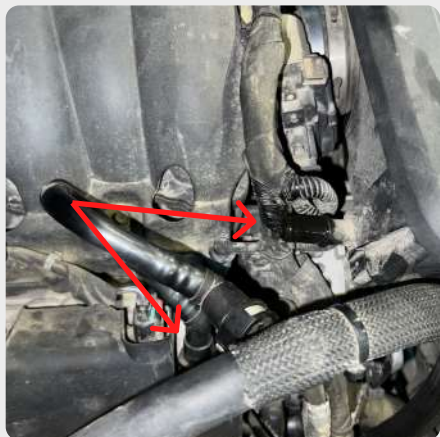

Step 9

Loosen the below shown clamp and remove the stock intake tube

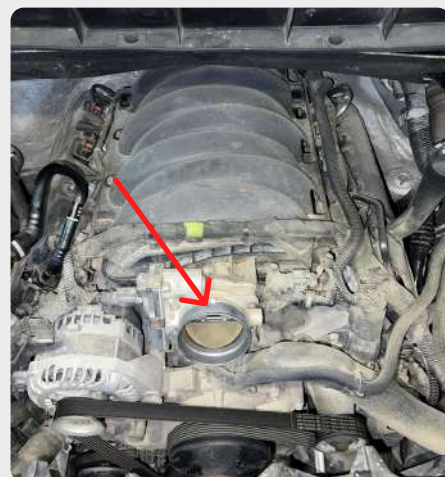

Step 10

Remove the below shown nut and keep it for later use.



BlackBoost Cold Air Intake Installation



Blackboost Cold Air Intake Installation


Step 1

Install the previously removed sensor to the BlackBoost tube as shown below.
Ensure to connect the sensor cable to the sensor once the BlackBoost Tube is installed.



Step 2

Place the BlackBoost Airbox as shown below and tighten the previously removed nuts.
Make sure the OEM air inlet duct is inserted into the Airbox as shown below.
Adjust the duct accordingly.

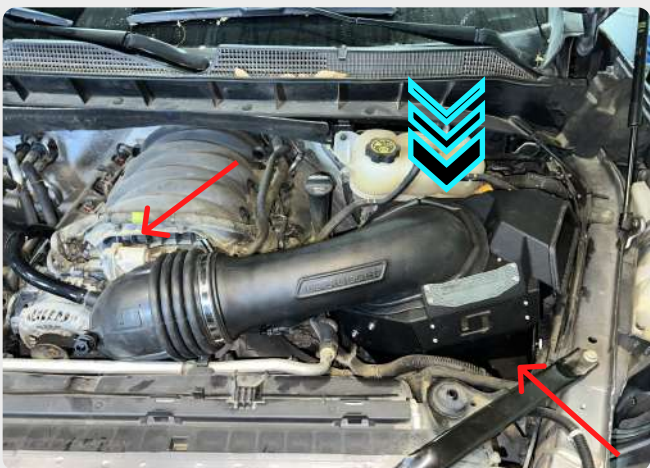

Step 3

Install the BlackBoost hose as shown below.



Step 4

Make sure all the the clamps are tightened.



Step 5

Position the OEM duct and use the previously removed clip to lock it.



Step 6

Install the BlackBoost Logo Plates.



Step 7

Install back the previously removed plastic air diverter using the push clips.



Step 8

Tighten the previously removed screws and install safety catch lever.



Disabling Check Engine Air Filter System




Step 1

To prevent this message from appearing, the Air Filter Life system must be disabled. Please refer to the attached photos and follow the instructions provided.




Step 2

Navigate to the section with the gear icon and scroll down to the Info Page Options.

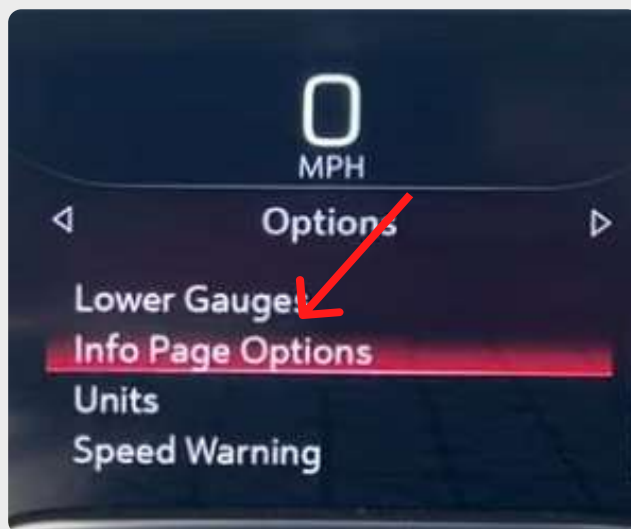



Step 3

In the Info Page Options scroll down to the Air Filter Life option and make sure it is checked.

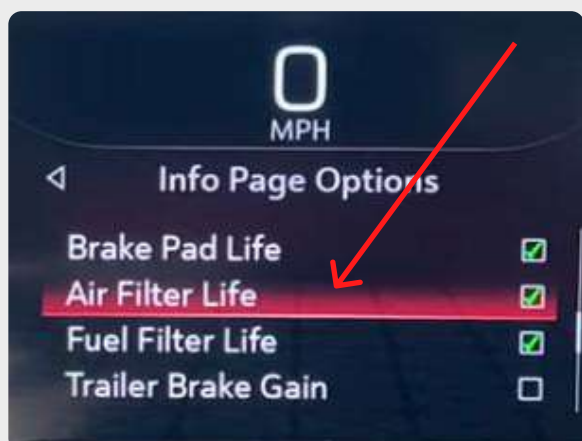


Step 4

Go back and left to the Info Page and scroll down till the Air Filter Life system screen.

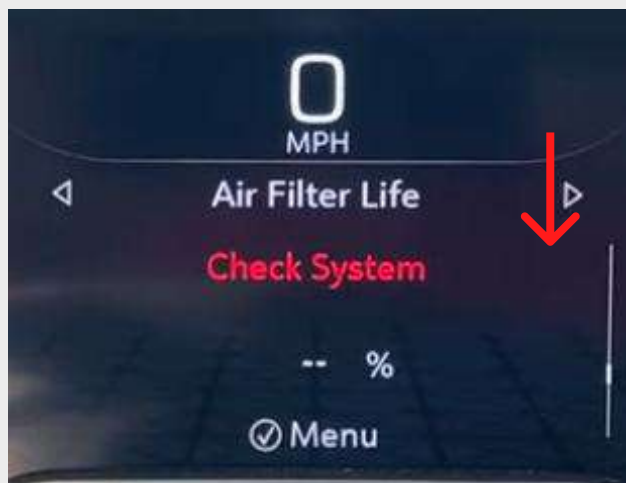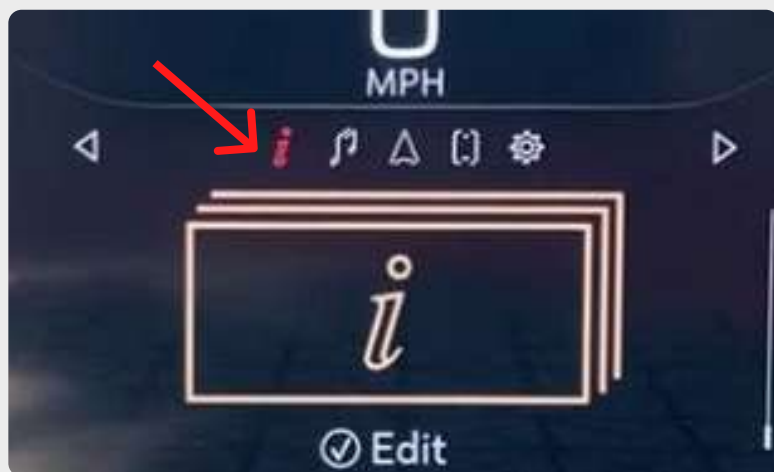

Step 5

Reset and Disable

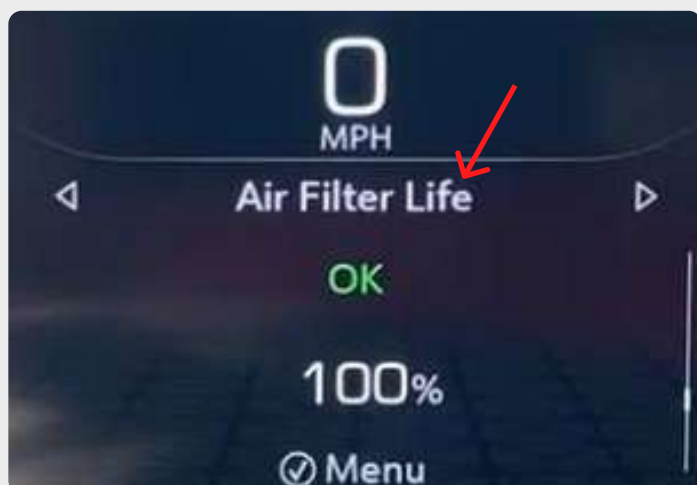



Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.*