


Toyota Supra Mk5 - B58 Cold Air Intake System

SKU: BBCAIS035

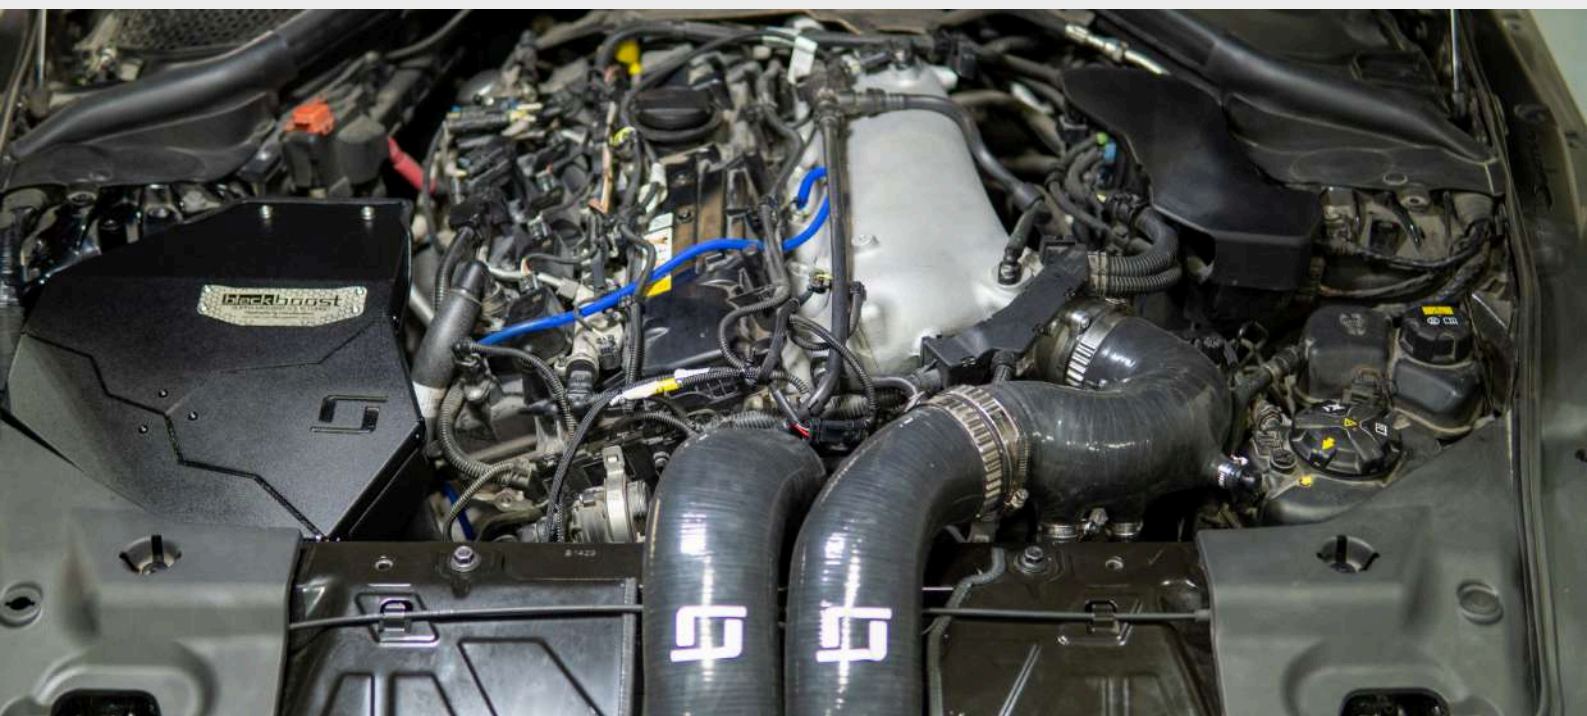

Thank you for purchasing the Toyota Supra Mk5 Cold Air Intake System

This Installation guide provides instructions on how to install the Blackboost Cold Air Intake and the tools required.

Content of the Package

1. Powder-coated Airbox	-	1
2. Molded Composite Intake Tube	-	1
3. Molded Composite Coupler	-	1
4. Logo plate	-	2
5. 5.5 -Inch High-Flow Synthetic Dry Air Filter with clamp	-	1
6. Spacer - For the 2021+ models to raise the OEM strut brace	-	2



Compatibility

Supra Mk5 B58 - B58 3.0L I6 Turbo - (2019+)

Supra Mk5 B58 - B58 3.0L I6 Turbo - (2021+)

Caution: Make sure the engine bay is cooled down.**Tools Required**

1. Hex nut driver
2. Spanner
3. Long Nose Pliers

PPE


1. Gloves
2. Safety Glasses

OEM Intake Box Removal**Step 1**

Remove the strut brace as shown below.

**Step 2**

Unplug the sensor cable from the OEM airbox.

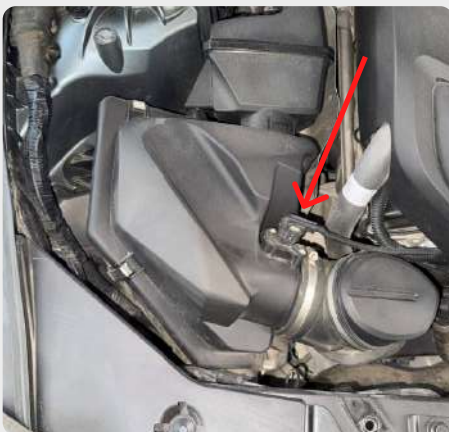

Step 3

Loosen the clamp shown below to remove the OEM airbox.




Step 4

Disconnect the OEM airbox from the tube and remove the airbox.




Step 5

Press the tabs of the CCV connector and gently pull the CCV hose away from the intake pipe. Don't yank, as the plastic can get brittle. (Long nose pliers can be used to reach the connector easily but make sure you don't break the tabs of the connector)

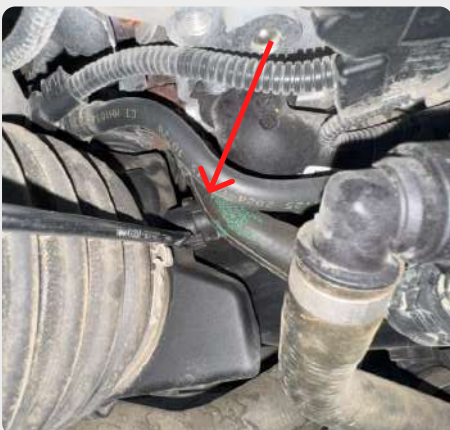

Step 6

Remove the clip shown below.

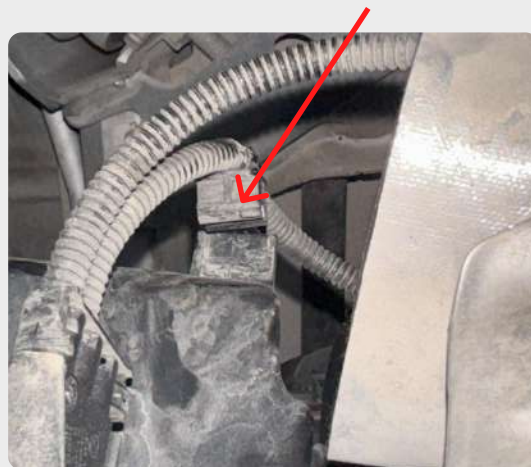

Step 7

Unclick the retaining clip to release the pipe from the turbo inlet.



BlackBoost Cold Air Intake Installation




Step 1

Install the rubber grommets (previously removed from the OEM airbox) as shown below.




Step 2

Position the BlackBoost Airbox and securely install it onto the grommet point as shown below.

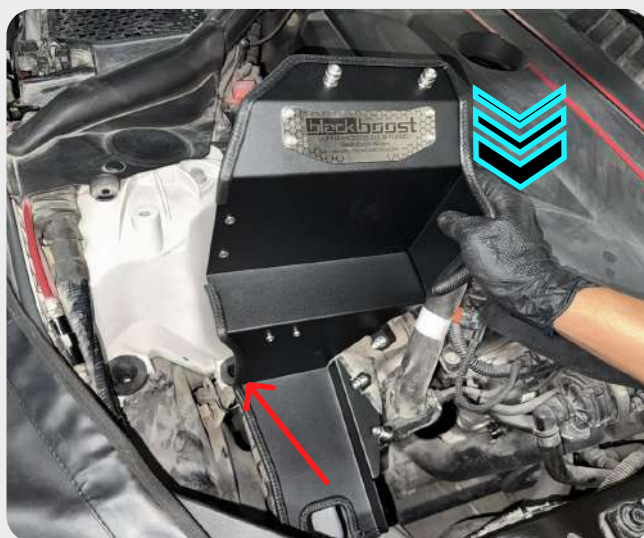


Step 3

Pay attention to the grommet point and ensure correct positioning & alignment of the BlackBoost Airbox with the OEM inlet duct.

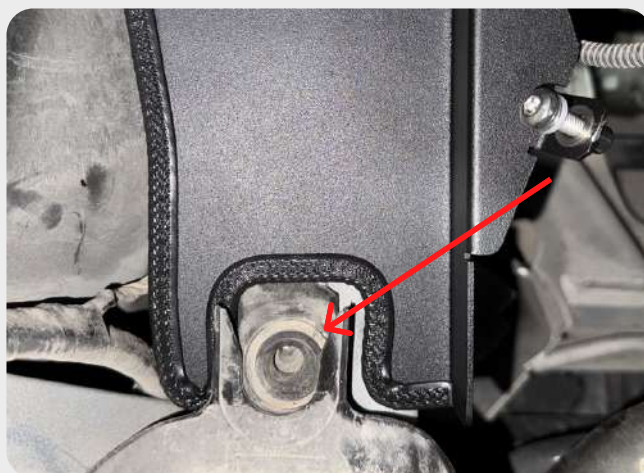

Step 4

Install the BlackBoost Airbox bracket together with the grommet as shown below.

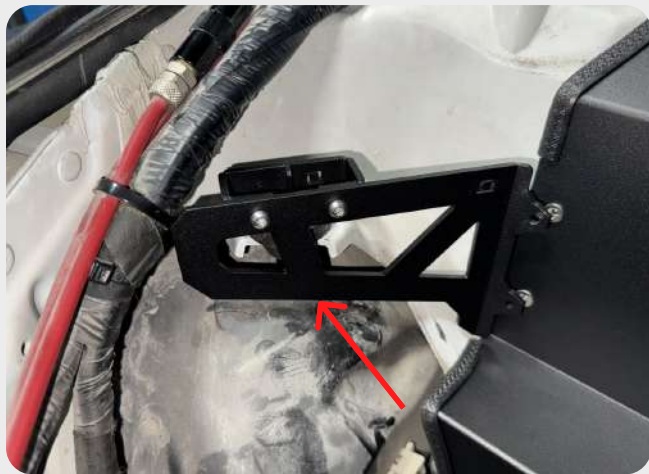

Step 5


Tighten the bracket screws to secure the Airbox and complete the BlackBoost Airbox installation



Step 6


Install the BlackBoost coupler as shown below.

Make sure the arrow on the coupler is oriented upward.

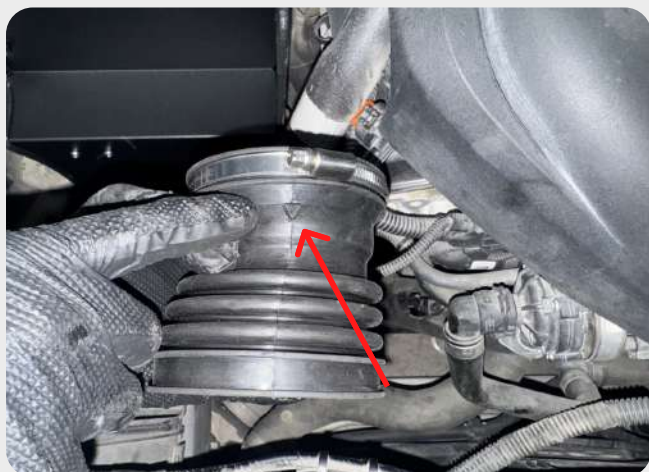

Step 7

Once the coupler is securely inserted, tighten the coupler clamps at the back of the coupler.

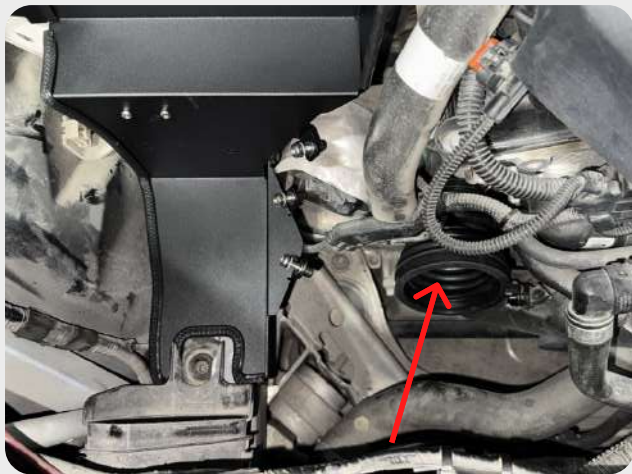


Step 8

Remove the sensor from the OEM Airbox and install it onto the BlackBoost tube as shown below.




Step 9

Ensure the small rubber gasket on the sensor is seated correctly, then tighten the screws.

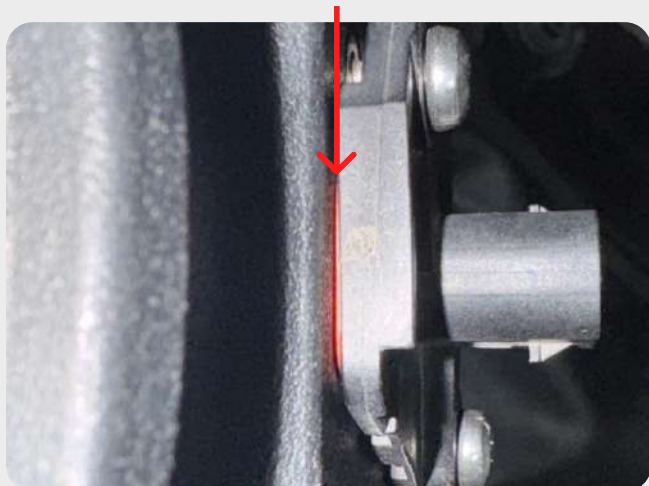

Step 10

Install the BlackBoost tube onto the coupler as shown below, then connect the CCV hose.

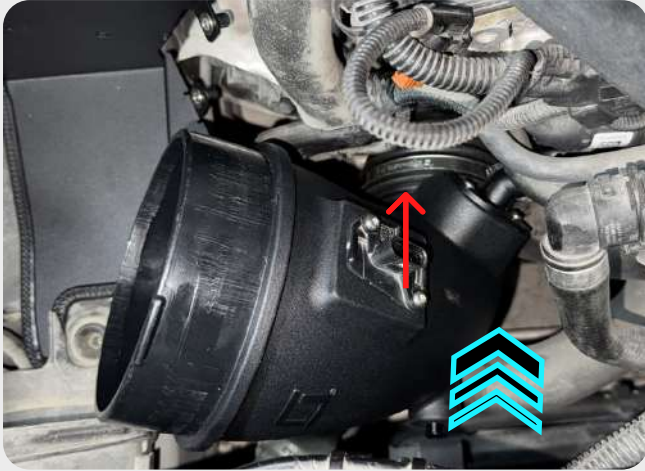

Step 11

Install the right side panel as shown below and tighten the screws.



Step 11

Connect the sensor cable and ensure to tighten the coupler clamps.

(Only hand tighten it and make extra care to make sure you don't over tighten it)



Step 12

Install the BlackBoost filter as shown below and tighten the clamp.

(Only hand tighten it and make extra care to make sure you don't over tighten it)



Step 13

Install the Filter cover and use the screws to tighten it.



Step 14

Use the spacers provided by BlackBoost when installing the strut brace for the 2021+ models.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components or yourself. Please be aware of local laws and regulations prior to installation.*