

Volkswagen Golf Mk7 / 7.5 / 8 FTA

SKU: BBCAIS008




Thank you for purchasing the BlackBoost Volkswagen Golf Mk7 / 7.5 / 8 FTA.

This Installation guide provides instructions on how to install the Blackboost FTA Adapter and the tools required.

Contents of the Cold Air Intake Packaging

1. FTA	-	1
2. Screws	-	3

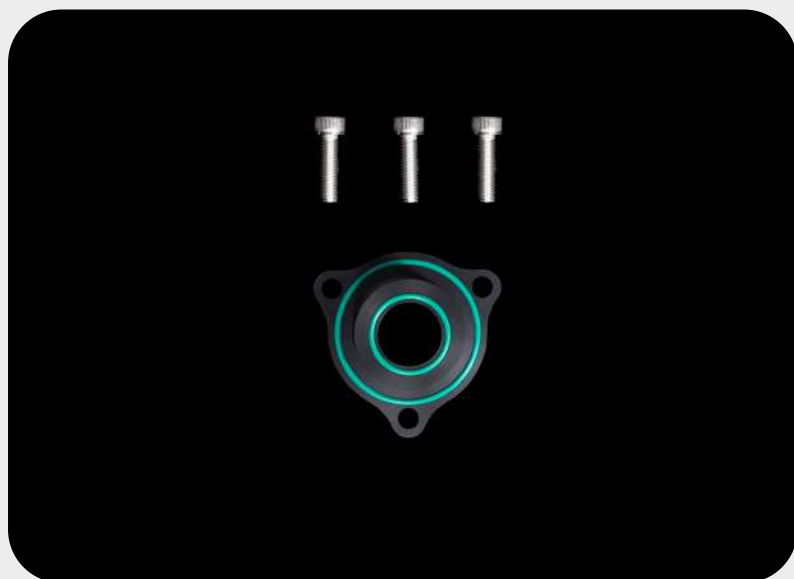

Compatibility

Volkswagen Golf Mk 7

Volkswagen Golf Mk 7.5

Volkswagen Golf Mk 8

Caution: Make sure the engine bay is cooled down.



Tools Required



1. 7mm hex nut driver.
2. 8mm hex nut driver.
3. Small flathead screwdriver (3mm).
4. Tension Clamp Pliers

PPE



1. Gloves
2. Safety Glasses

Step 1

First remove the wires connected to the diverter-valve as shown below. Use the flat head screw driver to unclip the wires.




Step 2

Loosen the clamps of the below-shown plastic pipe and remove it for easy accessibility.





Step 3

There are 3 screws on the diverter-valve. Unscrew all 3 screws to remove the divert-valve.

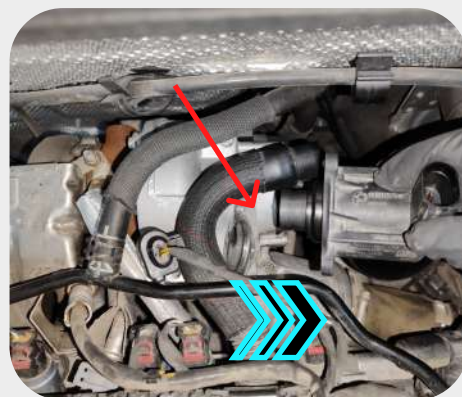

Step 4

Place the BlackBoost FTA on to the diverter-valve as shown below.
Install the FTA as shown below and then tighten all 3 screws.

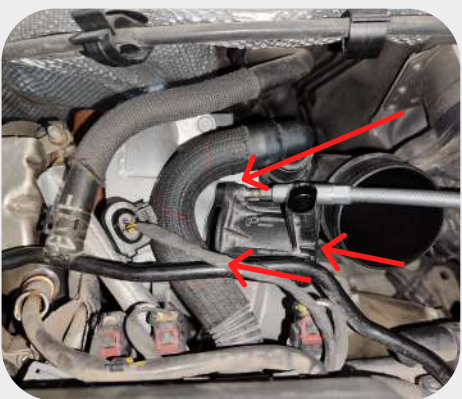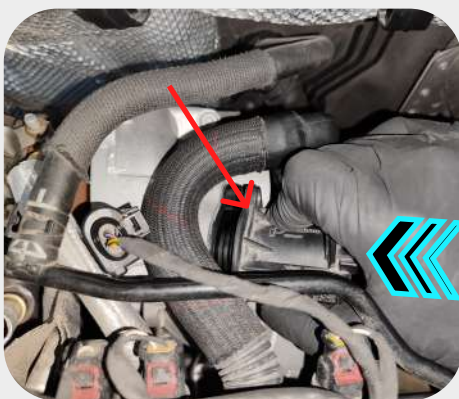

Step 5

Connect the wires back into the diverter-valve. Finally place the plastic pipes and tighten clamps.





Thank you again for your purchase.

Hope you enjoy, drive safe & responsibly.

Disclaimer: *In no event will BlackBoost, or its affiliates be liable for any damage to your car, its components, or yourself. Please be aware of local laws and regulations before installation.*